










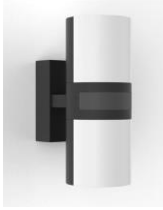



Product Identification		Product Image
Company Name	LUTEC	
Item code	5198102118	
Module code	5198102118M	
Product Name	CYRA	
Last modified	2021/6/20	

Step

	
1. Light	2. Soak in alcohol for 15 minutes, use a large flat-blade screwdriver to open the translucent cover on both
	
3. Unscrew and remove the reflector	4. Solder the L and N wires of the system board
	
5. Unscrew and remove the metal part	6. Remove the screw on the sensor
	
7. Unscrew and remove the terminal and plastic plate	8. Unscrew and remove the back cover
	
9. Unscrew the screws of the knob board	10. Unscrew and remove the knob
	
11. Remove the probe board and the knob board	12. Module